



ENGLISH

H.P. Homogenizers
& Plunger Pumps

Industrial Homogenizers



TECHNICAL DATA SHEET MODELS:

FBF 9090 • FBF 9110
FBF 9132 • FBF 9160




Watch the video



www.fbftalia.it

COMPRESSION HEAD AND HOMOGENIZING VALVE

- Compression head manufactured from a single block of high quality stainless steel (duplex 2205 or equivalent), machined and ultrasounds checked, with a 5 year guarantee against cracking
- Each valve assembly is housed within an individually inspectable duplex 2205 (or equivalent) stainless steel block
- Plungers in stainless steel with double coating in chrome and DLC (Diamond Like Carbon)
- Rear water chambers (significant reduction in water consumption) containing double bushings for plungers alignment
- Valve group assemblies have replaceable seats and hemispherical valve shutters, ideal for processing a very wide range of products
- Homogenizing valves designed to provide efficient use of energy, with high stability and alignment of the moving parts (impact head) due to the hydrodynamic assembly, which ensures a vibration-free homogenization
- Safety valve, in sanitary execution, of spring type with replaceable shutter and seat

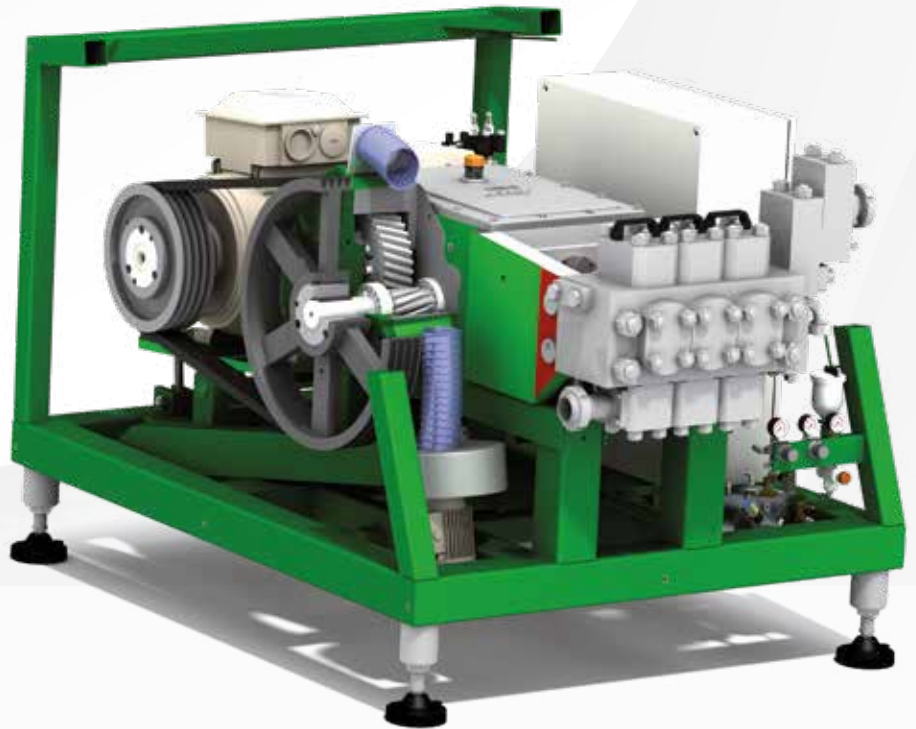

MOTORIZATION

- Pump body made from a thick walled premium grade high-resistance cast iron, engineered to withstand heavy loads and cancel out vibrations
- Crankshaft made of special type ultrasounds checked steel, machined from a heat treated solid piece with high-quality finishing of the crankpins and complete nitriding; supported by 5 heavy-duty roller bearings (with bronze bearings used on the crank pins only)
- Power transmission with double reduction stage: "V" belts/pulleys, semi-automatic tensioning system, with two helicoidal gears in the pump body (slow gear coupled directly on the crankshaft)
- Pressurized type lubricating plant, correct oil level checked by a proper inspection window installed on the machine front side, irregular oil pressure alarm with warning light, driven impurities filtering. For the best thermal balance/dissipation all transmission's components are oil splashed
- 3 phase, 4 pole, AC electric drive motor of leading Companies
- Frame made of thick carbonated steel square section pipe, powder coated, supplied with dismantlable satin finish stainless-steel panels

MAINTENANCE KIT

- Initial spare parts set supplied with the machine includes the following: full set of gaskets, a set of valve springs and a complete safety valves set
- Set of tools for ordinary maintenance
- Lubrication oil
- Instruction and maintenance manuals (2 copies + CD ROM)

STANDARD OPTIONS

- 2nd stage homogenizing valve controlled by a special oil-pneumatic system
- Digital pressure transducers and analogue gauges with 4-20 mA output
- Fixed Capacity (internal electrical board)
- Variable Capacity (external stainless steel panel)
- Aseptic Version with "sterility barriers" traced with steam condensate created by an integrated plant
- Pulsation dampeners on product inlet and/or outlet connections, for special aseptic version as well
- Pressure gauge with alarm contacts for the automatic cut-off of the homogenizing pressure, complete with timing device to manage the start/stop of the homogenizing valves
- Automatic homogenization pressure controller

TECHNICAL FEATURES

Homogenizer	Engine	Plungers	Water consumption	Dimensions	Weight (approx.)
Model	(kW)	(Nr.)	(l/h)	LxPxH (cm)	(kg)
FBF 9090	90				
FBF 9110	110	3	150-180	190x260x180	5.150 - 5.500
FBF 9132	132				
FBF 9160	160				

FUNCTIONAL FEATURES

Operating pressure	bar	100	130	150	180	200	230	250	300
Capacity	from (l/h)	26.000	26.000	25.000	21.000	19.000	17.000	16.000	13.000
	to (l/h)	40.000	39.000	33.000	27.000	25.000	22.000	20.000	16.000

Technical specifications can vary and are subject to change without notice



FBF ITALIA Srl
Via Are, 2, 43038 Sala Baganza (PR) Italy

Ph.: +39 0521 54 82 11 Fax: +39 0521 83 51 79
eMail: info@fbfitalia.it Web: www.fbfitalia.it